

## OPERATING MANUAL HG SERIES



### FEATURES

Aries, O-Squire & O-Laptop  
Color- Black / Off - White Door



Password



LED Display



Emergency Key




Smart Freeze

Please scan the QR code  
for reference video

## OPERATING INSTRUCTIONS FOR HG SAFE

Ozone HG safes is designed to help you protect your valuables against theft. Please install the safe in a cupboard or on a wall/floor and keep the emergency key in a safe place. Keep the safe in a secret place for paramount security.

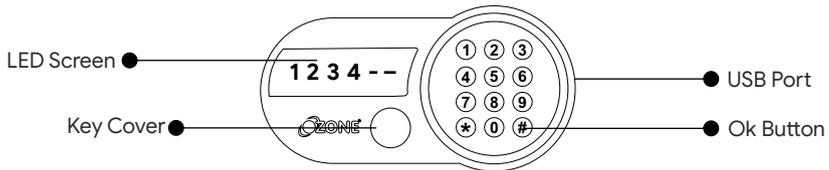

### Accessories Include:

- 1) 2 Keys
- 2) 4 Mounting Bolts
- 3) 4x1.5 Voltage AA Batteries
- 4) Floor Carpet
- 5) Warranty Card


### Specifications:

Model	External Size (HxWxD)mm	Weight (Kg.)	Volume (Ltr.)
O-squire	200x350x200	5.98	9.23
Aries	250x350x250	9.2	15.86
O-laptop	200x430x380	11	26.7

**NOTE:** 1) Kindly change the User and Master Password before operating the Digital Safe  
2) Please do not keep the Emergency Keys inside the safe!

## HOW TO OPEN A SAFE FOR THE FIRST TIME

### 1. OPEN THE SAFE USING THE EMERGENCY KEY

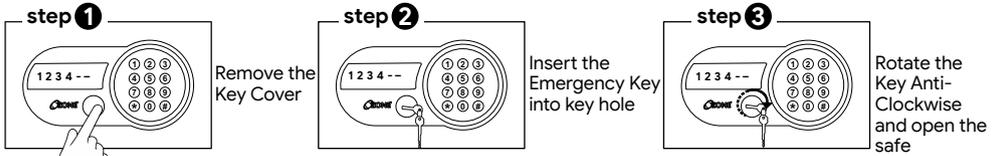

### 2. BY USING EXTERNAL BATTERY ADAPTOR




## INSTALLING THE BATTERIES

Open the safe door, remove the battery case cover and insert new batteries (4x1.5v AA) according to '+' '-' polarity.

**Low Battery Indication** - If the display will show "LO BT" in that condition we need to change the batteries.

**NOTE:** In case of battery drain, please replace all the existing batteries with new ones.

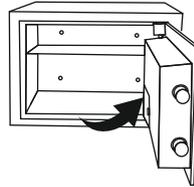

## HOW TO CHANGE THE USER PASSWORD

Existing user password is (1234).

- The door must be in open position.
- Enter 3-6 digits new user password.
- Close the door and hold it.
- Press "#" button the display will show "CLOSED" indicating that means the setting is successful.

## HOW TO CHANGE THE MASTER PASSWORD

Existing master password is (011223).

- The door must be in close position.
  - Enter "\*\*\*" twice, enter old password (011223)
  - Display will show pass counting (5-1) in between press "\*\*\*" Enter new master password then press "#"
- Display will so again, then re-enter same password and press "#" display will show done it means the master password has been changed successfully.

**NOTE:** If you open the safe by using master password, Please press "\*\*\*011223".

## TO LOCK THE SAFE



Close the door and hold it




Input your 3-6 new password then press “#”, the door will be closed automatically

## TO OPEN THE SAFE



Enter your 3-6 digits password the door will be open automatically

1. Shooting Bolts
2. Battery Box
3. Mounting Hole
4. Batteries

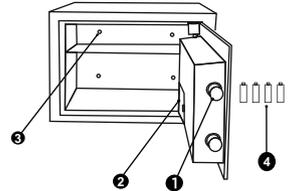

## AUTO FREEZE MODE

After four consecutive times of wrong password, the system will be locked automatically. During that time, the display will show “HOLD 15”. The system will start again after 15mins.

## ERROR INDICATION:

When screen displays the following indications, it means there is error. Please operate according to the following instructions.



- a) ERROR:** The code is incorrect, and you need to enter correct code.
- b) ERROR 1 :** The door cannot be opened normally, and the bolt is blocked. Please push the door slightly to loosen the bolt.
- c) ERROR 2 :** When the bolt is blocked ( probably the door is left unlatched), There is no way to lock the door. Hence push the door slightly to finish locking.

Interior LED light:

LED interior lighting to give you convenient access to valuables in a less lit/dark environment.

## INSTALLING THE SAFE

- Safe can be easily install in wardrobe or on wall.
- Fix the safe in the place which is not easy to move.
- Drill holes for expansion bolts (or clamping screws)in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.

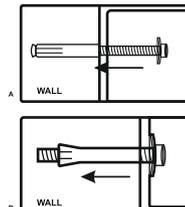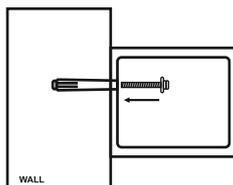

Do's	Don'ts
1) On receipt of the safe, install it properly	1) Don't leave the safe in open position
2) Keep mechanical override key (Emergency Key) at a Safer place	2) Don't Share your password with anyone
3) Always reset the User & Master password after installation of the safe	3) Do not apply any extra force on the keys on opening and closing the door

## **OZONE DIGITAL SAFE- CHECK LIST**

**MODEL NO.:** \_\_\_\_\_ **SERIAL NO.:** \_\_\_\_\_

**DATE:** \_\_\_\_\_ **DATE OF DELIVERY:** \_\_\_\_\_

### **CONTENTS:-**

- |                          |                          |
|--------------------------|--------------------------|
| 1. EMERGENCY KEY         | <input type="checkbox"/> |
| 2. PANEL KEY             | <input type="checkbox"/> |
| 3. DRAWER KEY            | <input type="checkbox"/> |
| 4. BATTERIES             | <input type="checkbox"/> |
| 5. ADAPTOR               | <input type="checkbox"/> |
| 6. RFID CARD             | <input type="checkbox"/> |
| 7. FASTNER               | <input type="checkbox"/> |
| 8. MANUAL                | <input type="checkbox"/> |
| 9. OPERATION CHECK       | <input type="checkbox"/> |
| 10. BODY DAMAGE (IF ANY) | <input type="checkbox"/> |

---

**INSPECTED BY :-** \_\_\_\_\_

CUSTOMER / DEALER SIGNATURE & SEAL

**E-Mail : [Info@ozonesecutech.com](mailto:Info@ozonesecutech.com) | Website: [www.ozonesecutech.com](http://www.ozonesecutech.com)**  
**Customer Care: 9310012300**